
J2

RAFTER CONNECTION with FITTED OSB GUSSET

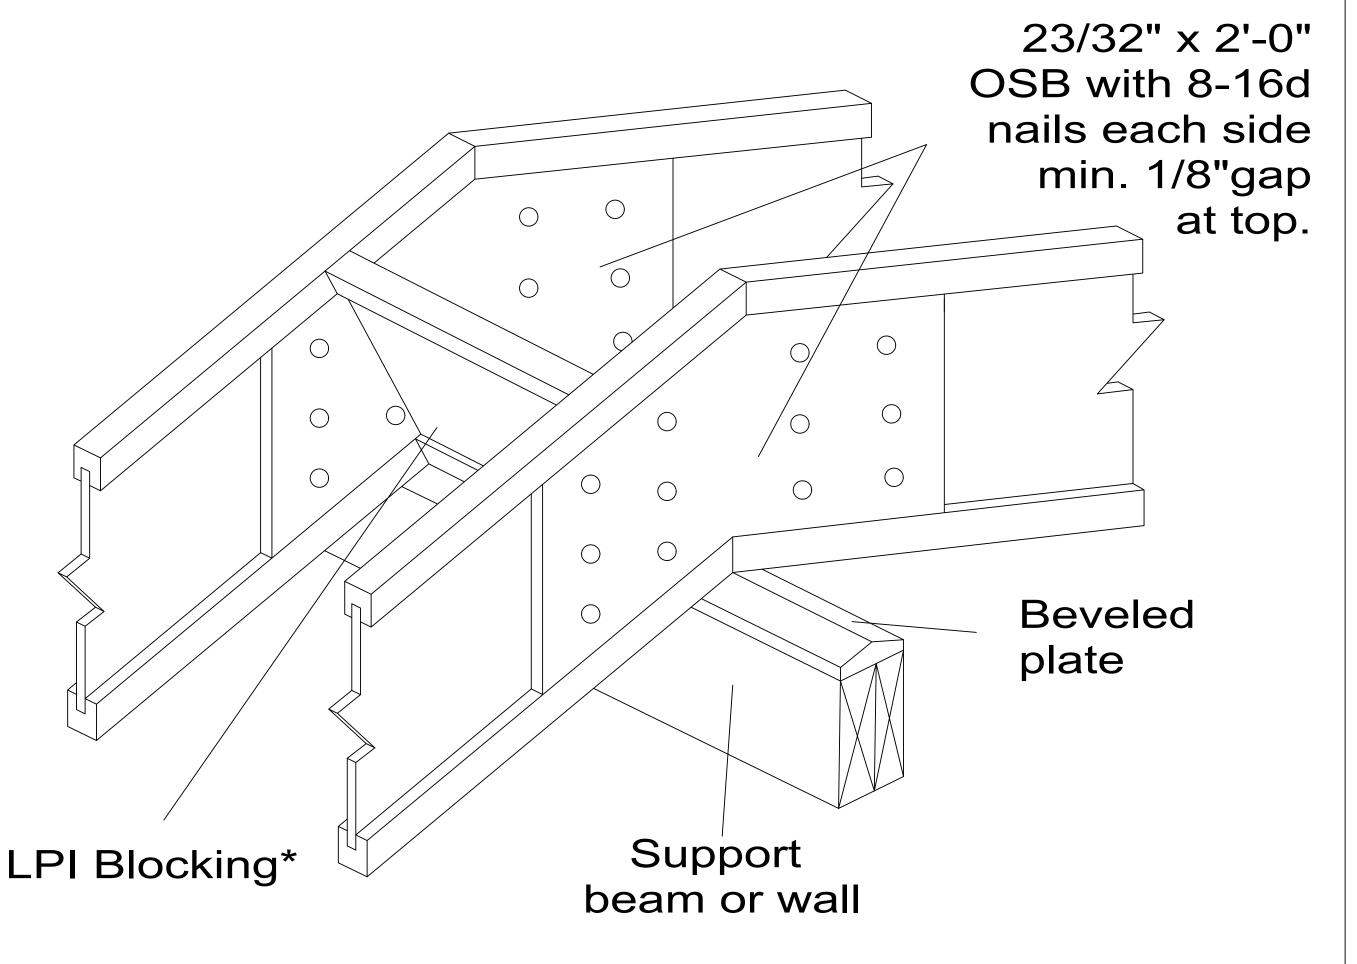

* Lateral resistance shall be provided. Other methods of restraint, such as full depth LP SolidStart OSB Rim, LSL, or LVL may be substituted for the LPI blocking shown.